



EFII System32 Ignition System Power Wiring

(4 and 6 cylinder installations)

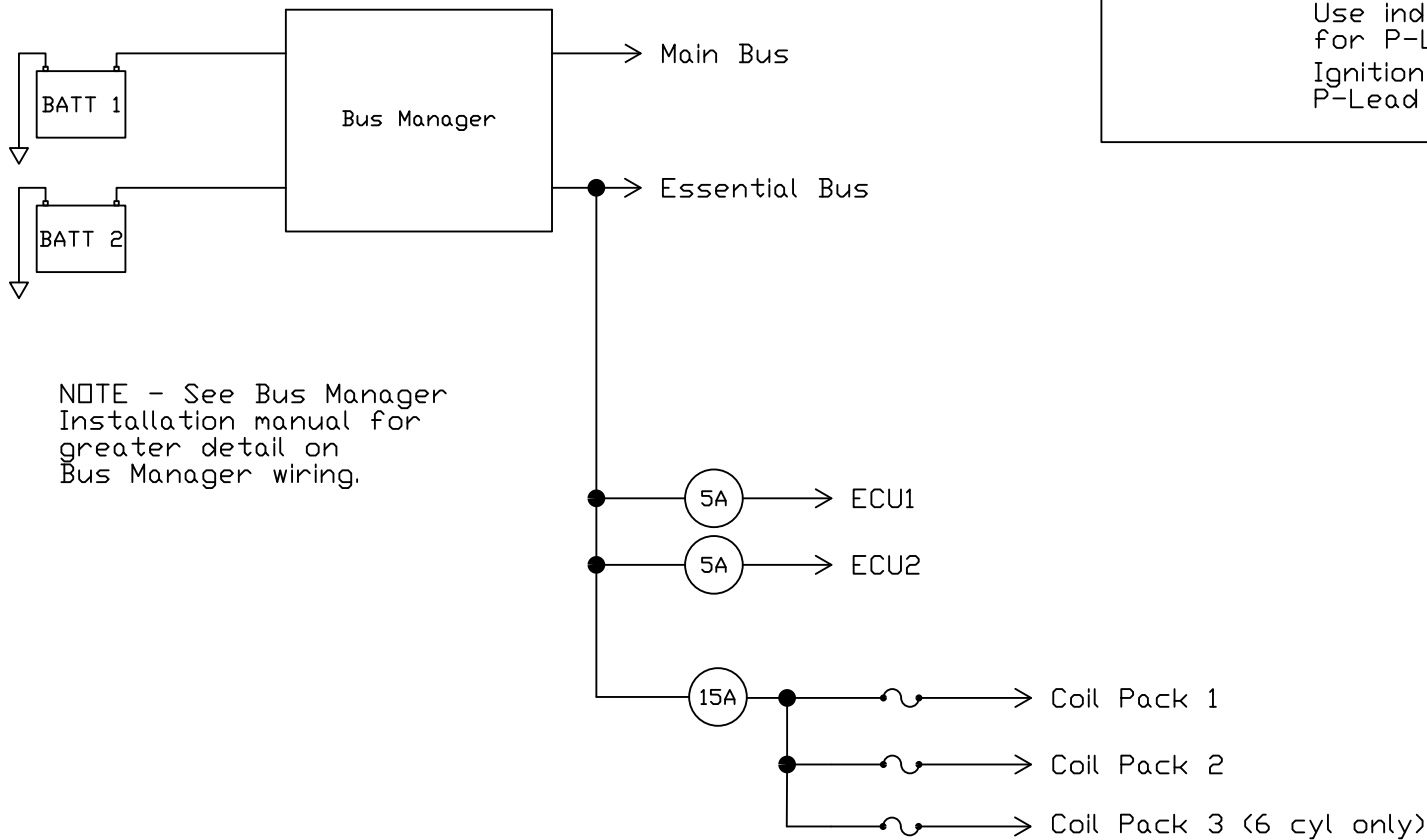

NOTE - See Bus Manager
Installation manual for
greater detail on
Bus Manager wiring.

NOTE - System32 wire harnesses include
individual fusible links within the harness
for each coil pack power lead
Fusible links are located
within the backshells of the engine side
circular connectors of the harness.

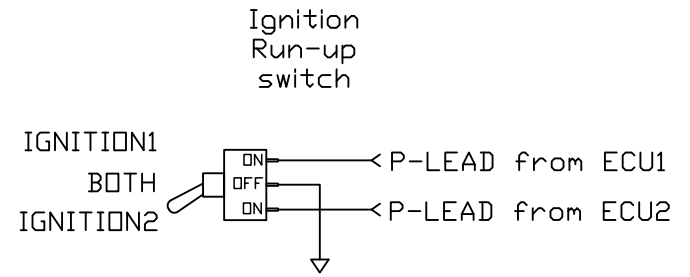

NOTE - Run-up switch option2 -
Use individual ON/OFF switches
for P-Lead function (2 required).
Ignition kill is active when
P-Lead is grounded.