


EFII System32 Ignition System Power Wiring


(4 and 6 cylinder installations)

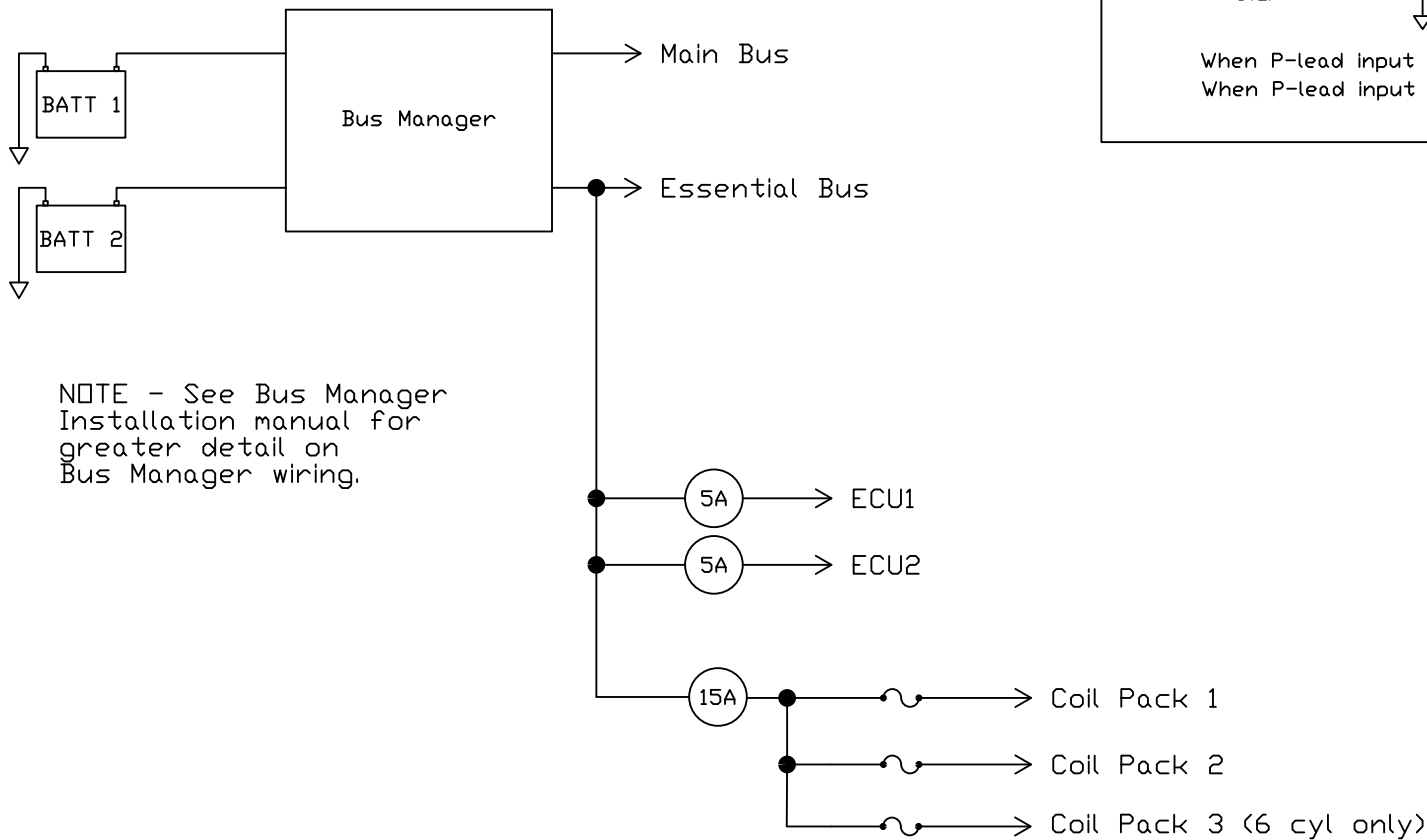

NOTE - See Bus Manager
Installation manual for
greater detail on
Bus Manager wiring.

NOTE - System32 wire harnesses include
individual fusible links within the harness
for each coil pack power lead
Fusible links are located
within the backshell of the engine side
circular connector of the harness.

Ignition Run-up switches

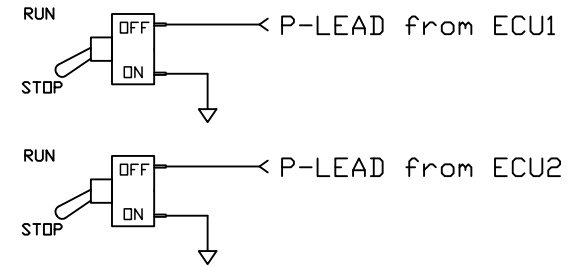

When P-lead input is grounded, ignition operation will STOP
When P-lead input is open, ignition operation will RUN